 



# Hinge Adjustments

**CLIP top series**  
170° hinges  
with face-frame adapter plate


## Side Adjustment




Turn front screw to achieve desired door position.

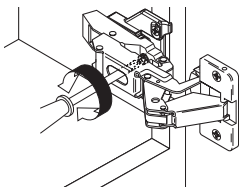


## Depth Adjustment

 


Rotate back screw to adjust door position.

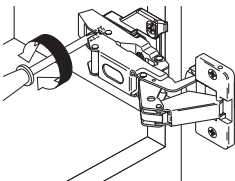


## Height Adjustment

 

Loosen screws on the mounting plate. Adjust door to position and tighten screws.

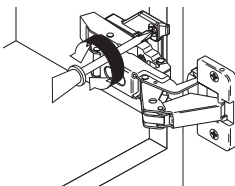

## Door Removal and Installation

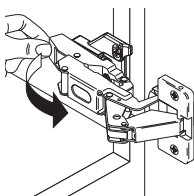

Release the lever under the hinge arm to remove.

To reinstall, place the hinge on the mounting plate and push the back with finger pressure. The "CLIP" sound confirms a secure attachment.

