
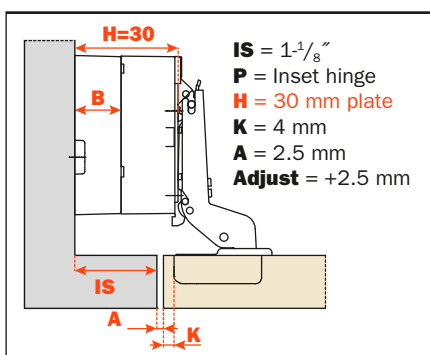
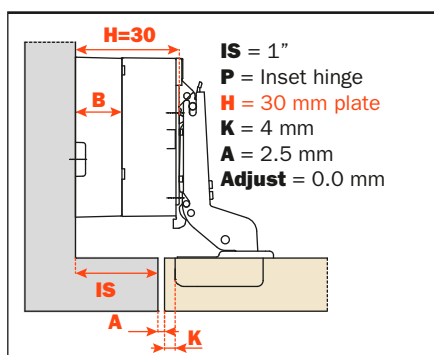
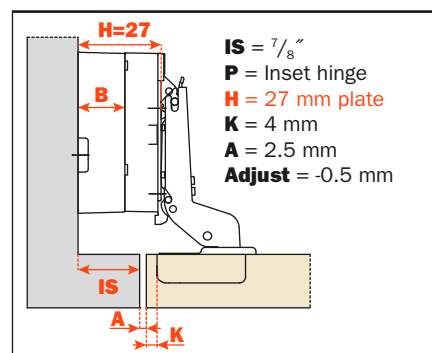
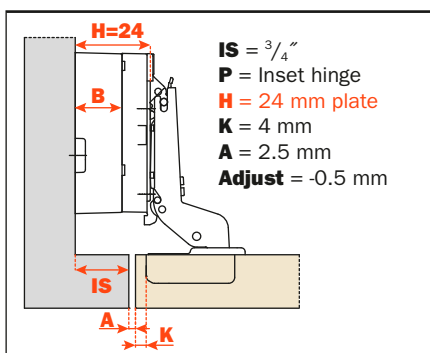
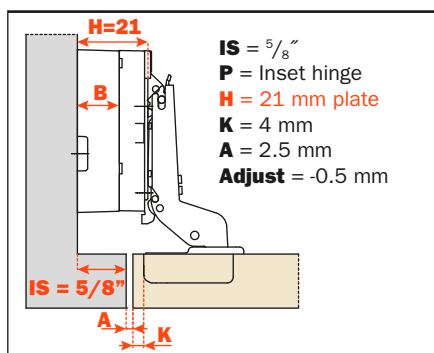
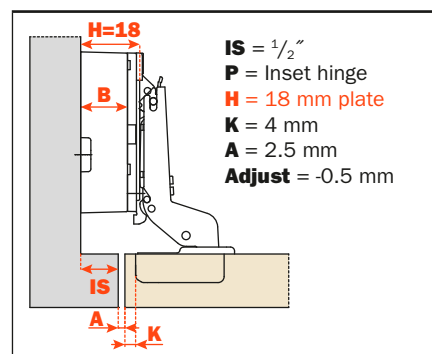
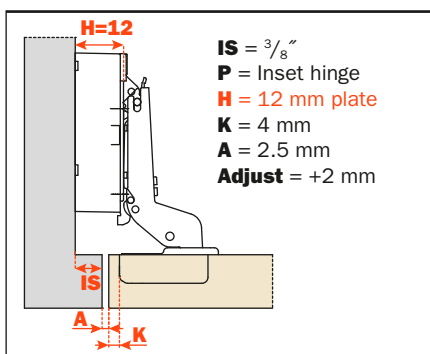
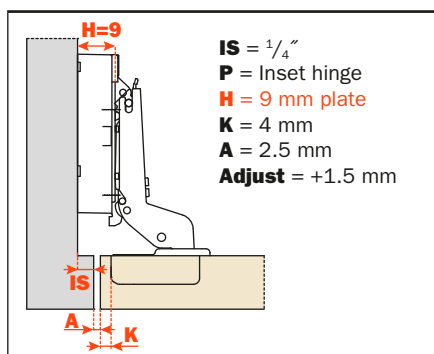
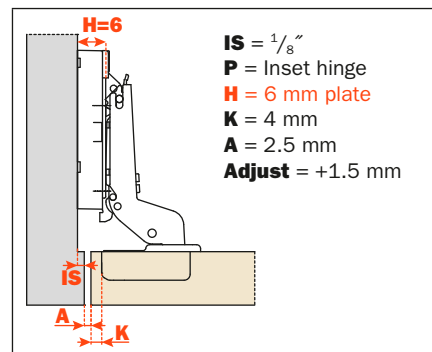
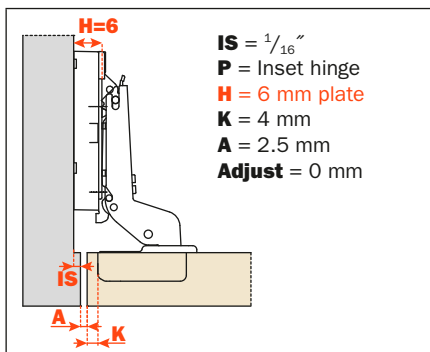


Select an inset style (P crank) hinge and the matching mounting plate thickness for your cabinet design.
Seleccionar una bisagra (codo P) para puerta interna y el espesor de la base correspondiente para el diseño de su mueble.

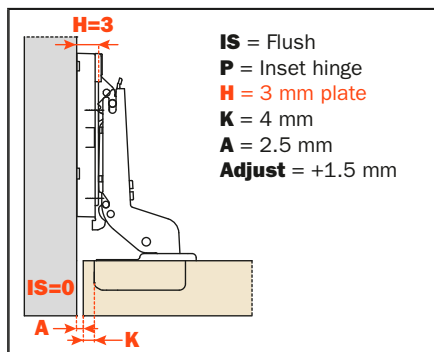

Legend

IS = recess (from side to frame edge)
B = mounting plate
H = mounting plate thickness
K = edge bore distance
A = gap
P = crank inset hinge

Abreviaciones

IS = distancia entre lateral y borde del marco
B = base
H = espesor de la base
K = distancia taladro borde externo
A = parte no cubierta del lateral
P = bisagra con codo para puertas internas