
AVENTOS HL — Face frame corner cabinet Appliance garage bracket

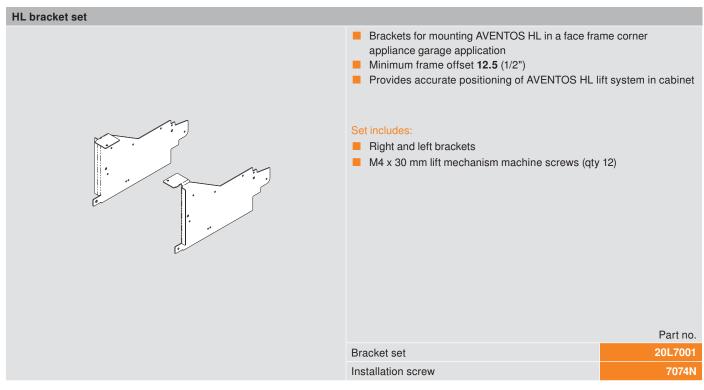

Bracket installation Attach each bracket to the top and side of the face frame opening Top mounting screw position with two #7 x 3/4" (7074N) wood screws. 29.5 9.5 12.5 min. Side mounting screw position



Arm assembly mounting plate location Attach mounting plate with four screws provided X + overlay **12.5** + overlay

Arm assembly NOTE: Position is 2 mm lower than a standard 20L3900.05 application 20L3900.05 305

